
borg& overström

T2 **Cutting Template**

Scale 1:1 / Page - A3

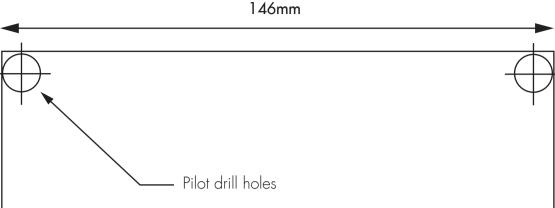

Important: Before making any cuts or drilling into the work surface, ensure the area below is free from water pipes or electrical cables. There is risk of serious injury or death if electrical cables are cut, and significant damage to property if a water pipe is cut.

- 1. Decide where you want the T2 to be mounted, and mark the centre and the desired distance away from the work surface edge. Align with the markings and secure the template in place with masking tape.
- 2. Drill the four corner holes using a 10mm drill bit.
- 3. Remove the template.
- 4. Using a straight edge mark out the guide lines between the four holes of the drip tray.
- 5. Cut along the lines, and remove the waste piece of work surface.
- 6. Clean up any sawdust left behind, and make sure the surface is left clean and dry.
- 7. Position the tray squarely into the opening ensuring the front edge is parallel with the front of the work surface.
- 8. Fix the tray using the fixing kit brackets underneath ensuring the nuts are tightened.

Mark how far from the edge of your work surface you want to install the driptray on a piece of masking tape. Align this line with the mark.

311mm